

QUICK START GUIDE



KEPCO An ISO 9001 Company.

RA 19-1U Rack Adapter



RA 19-1U RACK ADAPTER

I — INTRODUCTION

SCOPE OF MANUAL. This Quick Start Guide covers installation and operation of the Kepeco RA 19-1U Rack Adapter for two common configurations. For the full capabilities and specifications of the RA 19-1U, and to take advantage of the many choices and features not covered in this Quick Start Guide, the user is urged to download the complete Operator's Manual from the Kepeco web site at www.kepecopower.com/support/opman1s.htm#ra19-1u.

DESCRIPTION. Kepeco RA 19-1U rack adapters are specifically designed for any combination of up to four 50W, 100W or 150W HSF 1U power supplies.

The rack adapter is user-configurable for parallel, series, or independent power supply operation. Forced current sharing and OR'ing diodes for N+1 redundancy are built into the HSF power supplies. Redundant a-c inputs are provided to deliver independent source power to each power supply in a redundant pair. User-configurable keying can ensure that only the correct power supply can be installed in a keyed slot. Input/output connections between RA 19-1U and HSF power supply are via HSF connectors that plug into corresponding connectors of the RA 19-1U. All connections are made at the rear panel (see Figure 1).

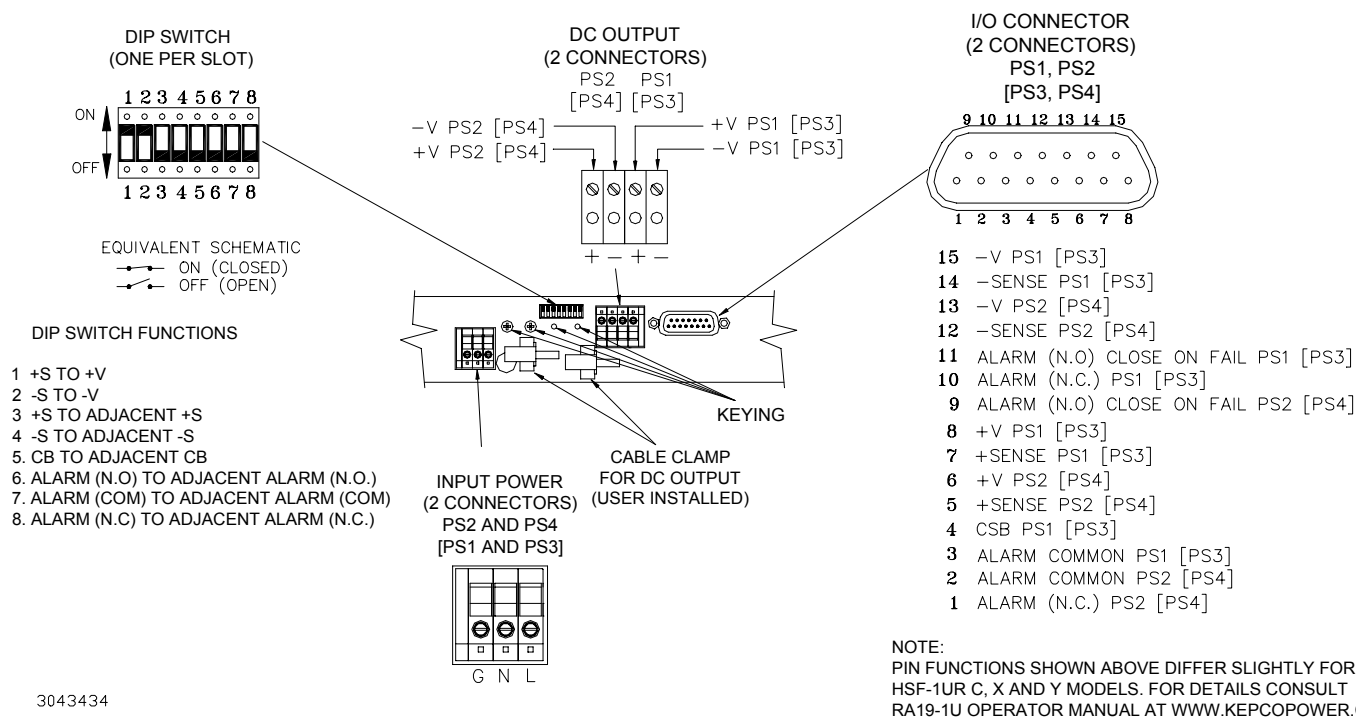


FIGURE 1. REAR PANEL CONNECTIONS, TYPICAL

II — PRE-INSTALLATION

NOTE: Either local or remote sensing **MUST** be used.

DIP SWITCHES. The DIP switches (Figure 1) are arranged as follows: DIP 1 is for PS1 sense lines; DIP 2 is for PS2 sense lines and for paralleling PS1 and PS2. DIP 3 is for PS3 sense lines and for paralleling PS2 and PS3. DIP

4 is for PS4 sense lines and for paralleling PS3 and PS4. Table 1 describes the function of each DIP switch position.

INDEPENDENT OPERATION. The RA 19-1U rack adapter is shipped with the DIP switches of all slots configured for independent operation (see Figure 1) and local sensing. Refer to RA 19-1U manual for remote sensing.

TABLE 1. REAR PANEL DIP SWITCH FUNCTIONS

DIP SWITCH POSITION	FUNCTION	DIP SWITCH SETTINGS
1, 2	Local / Remote Sensing Selection	Position 1 connects +V+ to +S, Position 2 connects –V to –S. Both required ON (factory default) for independent operation with Local Sensing. Both required OFF for: a) Independent configurations using Remote Sensing. b) Independent configurations using Local Sensing with user supplied connections from +V+ to +S and –V to –S. c) All parallel configurations (sensing must be established using external wires). d) All series connections.
3, 4 (SEE NOTE)	Connect Sense + and – in parallel	Position 3 connects +S to adjacent slot +S, Position 4 connects –S to adjacent slot –S. Both required OFF (factory default) for all configurations except parallel configurations using DIP switch settings to connect the sense leads in parallel. Both required ON for parallel configurations using DIP switch settings to connect the sense leads in parallel.
5	Current Balance (forced current share)	Required ON for parallel operation with forced current share (connects current share lines in parallel) unless connections are made via external wires Required OFF (factory default) for a) independent and series configurations. b) Parallel configurations using external wires at I/O connector to connect CSB (current share bus) lines in parallel. c) Parallel configurations without forced current sharing (current balancing),
6, 7	Close on Failure Alarm	When set to OFF (factory default), individual power supplies produce closure between I/O connector N.O. and COM pins upon failure. When set to ON, parallels N.O pins of adjacent slots to allow a single alarm to provide failure indication (contact closure between N.O. pin and COM pin) if any one of many power supplies fails.
8	Open on Failure Alarm	When set to OFF (factory default), individual power supplies produce open between I/O connector N.C. and COM pins upon failure. When set to ON, connects N.C to COM between adjacent slots so that individual alarms are connected in series. This allows a single alarm to provide failure indication (contact open between N.C. pin and COM pin) if any one of many power supplies fails.

PARALLEL OPERATION. The most common use for the RA 19-1U rack adapter is with two or more HSF's connected in parallel to a single load with forced current sharing to increase current output, increase reliability and/or provide redundancy. Only adjacent slots can be connected in parallel using DIP switches.

Figure 3 shows HSF's in slots 3 and 4 connected in parallel (master/slave, master established automatically by voltage) with forced current sharing and a close-on-fail alarm circuit. Both HSF modules are configured for output voltage to be adjusted from the front panel trimpot (factory default setting). See HSF operator manual for other output voltage adjustment options.

Configure DIP 4:

1. Set positions 1 and 2, to ON. This connects +S to +V and –S to –V for slot 4, establishing local sensing for slot 4.
2. Set positions 3 and 4, to ON. This connects sense lines (+S to +S and –S to –S) for slots 4 and 3.
3. Set position 5, to ON. This connects the current share bus (CB) for slots 4 and 3.

4. Set positions 6 and 7 to ON. Position 6 connects the normally open ALARM (N.O.) lines and position 7 connects the ALARM (COM) (common) for slots 4 and 3, implementing a close-on-fail alarm circuit (see equivalent schematic shown in Figure 3. If either PS3 or PS4 fails, a contact closure provides continuity across pins 7 and 14 of both I/O 4 and I/O 3.
5. Set position 8 to OFF. This position is only set to ON for open-on-fail alarm circuits.

Configure DIP 3:

1. Set positions 1 and 2, to ON. This connects +S to +V and –S to –V for slot 3, establishing local sensing for slot 3.
2. Set positions 3 and 4, to OFF. This isolates sense lines (±S) between slots 3 and 2.
3. Set position 5 to OFF. This isolates the current share bus (CB) between slots 3 and 2.
4. Set position 6 and 7, to OFF. This isolates the ALARM (N.O.) and ALARM (COM) lines between slots 3 and 2.
5. Set position 8 to OFF. This position is only set to ON for open-on-fail alarm circuits.

SERIES OPERATION. See RA 19-1U Operator Manual for series operation details.

ALARMS. For independent configurations, Close on Fail contact closure is across I/O connector pins for ALARM

N.O. and ALARM COM (see Figure 1). Open on Fail circuits are across I/O connector pins for ALARM N.C. and ALARM COM. Figure 3 shows a parallel close-on-fail circuit for slots 3 and 4 using the DIP switches to make the connections. See Operator Manual for other options.

III — INSTALLATION

MOUNTING RACK ADAPTER: The rack adapter mounts directly to EIA-RS 310D standard 19" racks via the two mounting ears; two screws are required per mounting ear for proper support. **CAUTION: RACK ADAPTER SHOULD BE MOUNTED BEFORE INSTALLING POWER SUPPLIES.** Install each HSF power supply in desired slot and secure using two retaining latches as described by the applicable HSF Power supply manual. Make sure the two latches are in the open position before installing HSF modules.

The rack adapter is supplied with six cable clamps equipped with release levers that can be snapped into holes provided in the rear panel (see Figure 1) to support the weight of the input, output and signal cables.

OPTIONAL KEYING: HSF power supplies are keyed by voltage at the factory. The keyway is established by installing screws (4-40 x 0.75 in. thread-forming, Kepco P/ N 101-0480, provided) into the corresponding holes as indicated in Figure 2 so that the only holes open match the power supply pins. **DO NOT OVERTIGHTEN** these screws (max torque 5 in.-lbs. (0.6 N x m).

INSTALLATION/REMOVAL OF HSF POWER SUPPLIES: To install each HSF power supply insert HSF power supply in selected slot until power supply front panel is flush with rack adapter chassis. and secure with two front panel screws on power supply. **CAUTION: Do not overtighten these screws: max. torque is 2 in.-lbs (0.23 N x m).**

WARNING: Removal of HSF power supply from a "live" system must be done only by authorized service personnel after HSF power switch is set to OFF. Dangerous voltages may be accessible through the open slot after a power supply is removed.

DESIRED VOLTAGE	SCREWS TO BE INSTALLED AT REAR PANEL			
48 VOLTS	○	⊕	⊕	○
28 VOLTS	○	⊕	○	⊕
24 VOLTS	⊕	○	⊕	○
15 VOLTS	○	○	⊕	⊕
12 VOLTS	⊕	○	○	⊕
5 VOLTS	⊕	⊕	○	○
3.3 VOLTS	○	○	○	⊕

3042500

FIGURE 2. RACK ADAPTER KEYING

NOTES:

1. SLOTS 3 AND 4 CONFIGURED FOR AUTOMATIC MASTER/SLAVE PARALLEL OPERATION, LOCAL SENSING (USING DIP SWITCHES), SENSE CONNECTIONS, CURRENT SHARE AND CLOSE ON FAIL ALARM IMPLEMENTED USING DIP SWITCHES, HSF FRONT PANEL CONTROL OF OUTPUT VOLTAGE.
2. HSF-1UR POWER SUPPLIES MUST BE CONFIGURED FOR FRONT PANEL CONTROL OF OUTPUT VOLTAGE.
3. USE I/O MATING CONNECTORS (SUPPLIED) FOR ALARM CONNECTIONS.

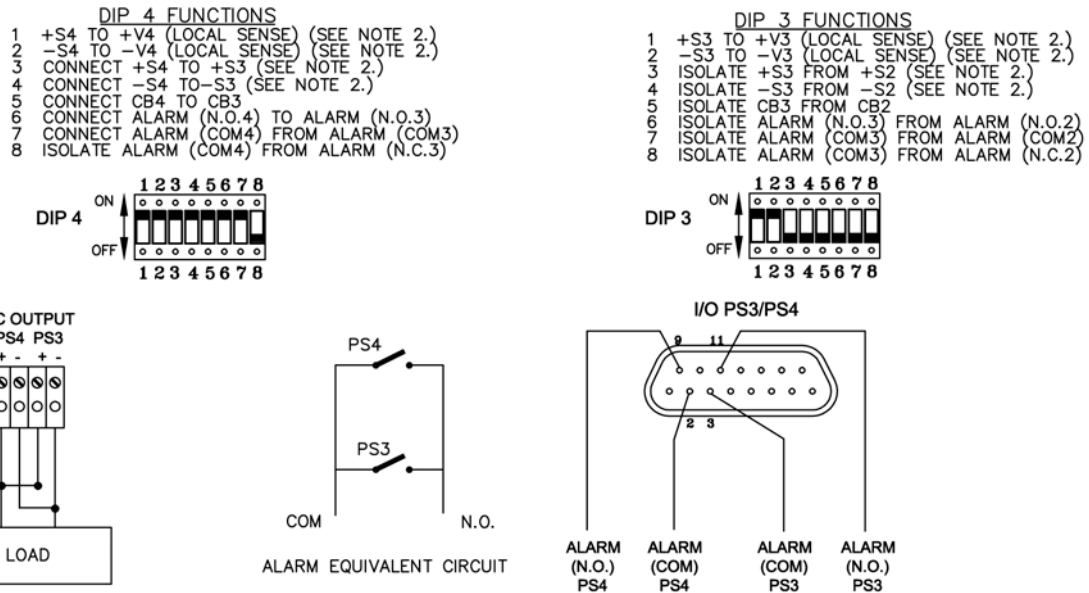


FIGURE 3. SLOTS 3 AND 4 CONFIGURED FOR PARALLEL OPERATION, WITH CLOSE ON FAIL ALARM CIRCUIT

IV — WIRING

A-C WIRING: It is the user’s responsibility to obey all local, national and international safety rules regarding field-wired apparatus and the grounding of the metal cover and case of any instrument connected to the a-c power source. Grounding is an intrinsic part of the safety aspect of the unit.

SOURCE POWER: Source power requirements are determined by the HSF power supply (see HSF power supply Instruction Manual); no adjustment or modification of the rack adapter is required.

Source power can also be custom configured via jumpers on the internal PC board. Contact Kepco Applications Engineering for further details.

Wire must be sized according to expected current. Wire size range for each terminal block is AWG 24-14; torque to 4 lb-in (0.4 N•M) maximum. **CAUTION: PROTECTION OF INPUT WIRING REQUIRES USER-CONFIGURED SAFETY INTERRUPTS.** The terminals are labeled L, N, and G. Their functions are:

- Terminal G (Ground) is the safety ground connection for the RA 19-1U.

- Terminals L (Line Phase) and N (Neutral) are connected to the input power entry connectors. Source power is provided to the power supplies indicated by the label on the rear panel.

CONTROL SIGNALS: Access to all the control signals for each HSF power supply is provided via two 15-pin D-subminiature I/O connectors on the rear panel of the rack adapter (see Figure 1). Two mating connectors (Kepco P/N 142-0449) are provided in a plastic bag.

OUTPUT LOAD: Load connections to the rack adapters are achieved via two 4-terminal terminal blocks located on the rear panel assembly. DC OUTPUT + and – for PS1 and PS2 are on one terminal block and + and – for PS3 and PS4 are on the other. Wire must be sized according to expected current. Wire gage may be between 24 GA and 14 GA; torque to 4 lb-in (0.4 N•M) maximum. As the length of load wires increases, ripple and noise may increase proportionally, therefore length and placement are critical for minimum ripple and noise. A filter consisting of a 50mF electrolytic capacitor in parallel with a 0.01mF capacitor must be used to eliminate unwanted ripple and noise pickup on the load wire during measurements. For remote sensing refer to RA 19-1U Operator manual. For noise-sensitive applications the load wires and sense wires must be twisted and/or shielded.